# Reference Manual

**REV. February 2020** 

**VCM-DAS-3** 

Analog Output & Digital I/O Module for the PC/104 Bus







## WWW.VERSALOGIC.COM

12100 SW Tualatin Road Tualatin, OR 97062-7341 (503) 747-2261 Fax (971) 224-4708

Contents Copyright ©2013-2020 All Rights Reserved

#### Notice:

Although every effort has been made to ensure this document is error-free, VersaLogic makes no representations or warranties with respect to this product and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose.

VersaLogic reserves the right to revise this product and associated documentation at any time without obligation to notify anyone of such changes.

PC/104 and the PC/104 logo are trademarks of the PC/104 Consortium.



MVCMDAS

# **Product Release Notes**

#### Rev 2.5 Release

Updated the High Output Digital I/O figure (page 2)

#### Rev 2 Release

Production release.

#### Rev 1 Release

Alpha. No customer release.

# **Support Page**

The VCM-DAS-3 support page, at <a href="http://www.VersaLogic.com/private/vcmdas3support.asp">http://www.VersaLogic.com/private/vcmdas3support.asp</a>, contains additional information and resources for this product including:

- Reference Manual (PDF format)
- Operating system information and software drivers
- Data sheets and manufacturers' links for chips used in this product
- BIOS information and upgrades
- Utility routines and benchmark software

**Note:** This is a private page for VCM-DAS-3 users that can be accessed only be entering this address directly. It cannot be reached from the VersaLogic homepage.

# **Contents**

Intro	duction	1
	Description	
	Technical Specifications	
	RoHS Compliance	
	About RoHS	
	Warnings	
	Electrostatic Discharge	
	Technical Support	
	Repair Service	4
Phys	sical Description	5
	Dimensions	
	Side Profile	6
	External Connectors	6
	Connector Locations	6
	Connector Functions and Interface Cables	7
	J1 I/O Connector	8
	J2 I/O Connector	9
	J3 I/O Connector	
	Installation	
	Hardware Assembly	
	Stack Arrangement Example	11
Conf	figuration	12
	Jumper Blocks	
	Jumpers As-Shipped Configuration	12
	Jumper Summary	13
	Base Address Configuration	
	Bit Mode Configuration	
	Enhanced Mode Configuration	
	Power-up Span Range Configuration	16
Reai	sters	17
	I/O Port Mapping	
	I/O Port Register Functions	
	Enhanced Mode Registers	
	Enhanced Control Register	
	Enhanced Mode Data Registers	
	Digital I/O Control Register	
	Digital I/O Data Registers	
	Digital Input Registers	
	Digital Output Registers	
	External Trigger Enable Register	
	Analog Output Data Registers	25

DAC Channel Select Register	25
DAC Write Registers	
DAC Read Registers	
Analog Output	27
Analog Output Ranges and Resolution	
Setting a Span Range	
Analog Output Data Representation	
Straight Binary Coding	
Offset Binary Coding	
Analog Output Programming	
External Trigger Update	
Load DAC Operation	
Analog Output Code Example	
Calibration	
Setting the Gain	
Reading the Gain	
Enhanced Mode Operations	
Reading DAC Data	
Reading the Span of a Channel	
Setting a Channel to Sleep Mode	
Reading the Sleep Status of a Channel	
Digital I/O	37
Signal Direction	
Signal Polarity	
Digital Input	
Digital Output	
Poforonces	38

Introduction 1

# **Description**

The VCM-DAS-3 is a PC/104-format data acquisition board that provides analog outputs and digital I/O for process control and other applications. Its features include:

- 16 analog voltage outputs with 12-bit resolution
- Multiple output ranges
- Software adjustable output ranges per channel
- Simultaneous or individual DAC update
- Power-up ranges set by jumpers in groups of eight, reset per channel by software

- Software calibration
- 16-bit or 8-bit ISA modes
- Read-back of DAC and SPAN codes
- Reset/power up to 0V outputs for all ranges
- External trigger
- +5V operation
- 24-channel digital I/O

The VCM-DAS-3 module provides 16 single-ended analog outputs and 24 digital I/O channels. Fully compatible at the register and connector level with the Diamond Systems Ruby-MM DAC board, VCM-DAS-3 also provides enhanced mode operation that extends its capabilities. In enhanced mode:

- Analog output ranges can be set for individual channels through software.
- Analog output and ranges can be read from individual channels.
- Specific analog channels can be placed into sleep mode to conserve power.
- Individual channels can be updated and read.
- Calibration can be performed with software.

# **Technical Specifications**

Specifications are typical at 25°C with 5.0V supply unless otherwise noted.

**Board Size:** 3.55" x 3.775" (PC/104 standard)

Storage Temperature:

-40° C to +85° C

**Operating Temperature:** 

-40° C to +85° C

**Power Requirements:** 

 $5V\pm10\%$ 

**Analog Output:** 

Channels: 16 outputs

Resolution: 12 bits

Output Ranges: Bipolar: ±10V, ±5V, ±2.5V, -2.5V to 7.5V

Unipolar: 0 - 10V, 0 - 5V Output Current: ±5 mA max per channel

Settling Time: 8 uS Typ. (±10V Range, 20V Step to ±1LSB)

Accuracy: ±1 LSB

Integral

Nonlinearity: ±1 LSB

Differential

±1 LSB Nonlinearity:

Calibration: One gain and one zero adjustment for all channels

Gain Temp.

Coefficient:

Update Method: Simultaneous, individual, or external trigger

Reset: Outputs reset to 0V when board is jumpered for Enhanced Mode,

mid-scale otherwise

Digital I/O:

Channels:

CMOS / TTL, 82C55 Mode 0 only Compatibility:

Low Input Voltage: -0.3V min., 0.8V max High Input Voltage: 2.0V min., 5.5V max. Low Output

Voltage: 0.4V max.

High Output

Voltage: 3.0V min.

Output Current: +4 mA / -8 mA max.

Pull-up Resistor: 10 K Ohm

Reset: All channels set to input mode

Software:

Operating Systems: Compatible with most X86 operating systems including

Windows 95/85/NT/CE/XP, QNX, VxWorks, and Linux

Driver Support: No native drivers. Fully compatible with Diamond Systems drivers.

Compatibility:

PC/104 - Full compliance, 8-bit and 16-bit

Weight:

0.152 lbs (0.069 kg)

Specifications are subject to change without notice.

# **RoHS Compliance**

The VCM-DAS-3 is RoHS-compliant.

#### **ABOUT ROHS**

In 2003, the European Union issued Directive 2002/95/EC regarding the Restriction of the use of certain Hazardous Substances (RoHS) in electrical and electronic equipment.

The RoHS directive requires producers of electrical and electronic equipment to reduce to acceptable levels the presence of six environmentally sensitive substances: lead, mercury, cadmium, hexavalent chromium, and the presence of polybrominated biphenyls (PBB) and polybrominated diphenyl ethers (PBDE) flame retardants, in certain electrical and electronic products sold in the European Union (EU) beginning July 1, 2006.

VersaLogic Corporation is committed to supporting customers with high-quality products and services meeting the European Union's RoHS directive.

# **Warnings**

#### **ELECTROSTATIC DISCHARGE**

#### Warning!

Electrostatic discharge (ESD) can damage circuit boards, disk drives and other components. The circuit board must only be handled at an ESD workstation. If an approved station is not available, some measure of protection can be provided by wearing a grounded antistatic wrist strap. Keep all plastic away from the board, and do not slide the board over any surface.

After removing the board from its protective wrapper, place the board on a grounded, static-free surface, component side up. Use an antistatic foam pad if available.

The board should also be protected inside a closed metallic anti-static envelope during shipment or storage.

# **Technical Support**

If you are unable to solve a problem after reading this manual please visit the VCM-DAS-3 Product Support web page at http://www.VersaLogic.com/private/vcmdas3support.asp. If you have further questions, contact VersaLogic technical support at (503) 747-2261. VersaLogic technical support engineers are also available via e-mail at <a href="mailto:Support@VersaLogic.com">Support@VersaLogic.com</a>.

# **VCM-DAS-3 Support Website**

http://www.VersaLogic.com/private/vcmdas3support.asp

#### REPAIR SERVICE

If your product requires service, you must obtain a Returned Material Authorization (RMA) number by calling (503) 747-2261. VersaLogic's standard turn-around time for repairs is five working days after the product is received.

Please provide the following information:

- Your name, the name of your company and your phone number
- The name of a technician or engineer that can be contacted if any questions arise.
- Quantity of items being returned
- The model and serial number (barcode) of each item
- A detailed description of the problem
- Steps you have taken to resolve or recreate the problem
- The return shipping address

Warranty Repair All parts and labor charges are covered, including return shipping

charges for UPS Ground delivery to United States addresses.

**Non-warranty Repair** All non-warranty repairs are subject to diagnosis and labor charges,

parts charges and return shipping fees. Please specify the shipping method you prefer and provide a purchase order number for invoicing

the repair.

**Note:** Please mark the RMA number clearly on the outside of the box before

returning.

# **Physical Description**

# **Dimensions**

The VCM-DAS-3 complies with all PC/104 standards. Dimensions are given below to help with pre-production planning and layout.

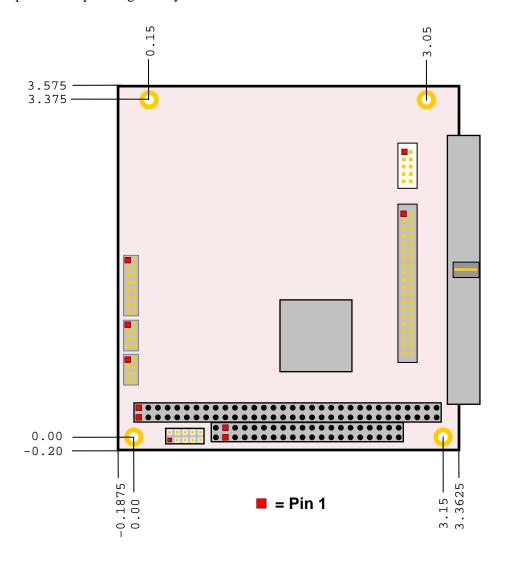


Figure 1. Dimensions and Mounting Holes

(Not to scale. All dimensions in inches.)

# SIDE PROFILE



Figure 2. Side Profile

(Not to scale. All dimensions in inches.)

# **External Connectors**

#### **CONNECTOR LOCATIONS**

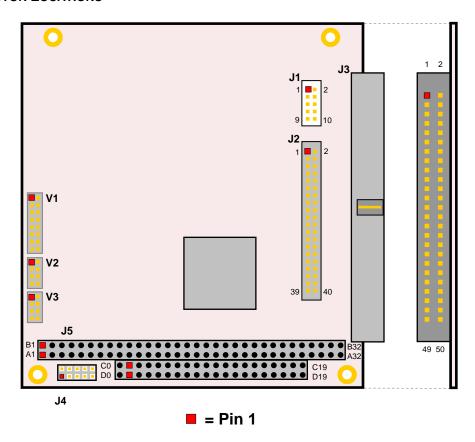


Figure 3. Connector Locations (Top)

(Not to scale.)

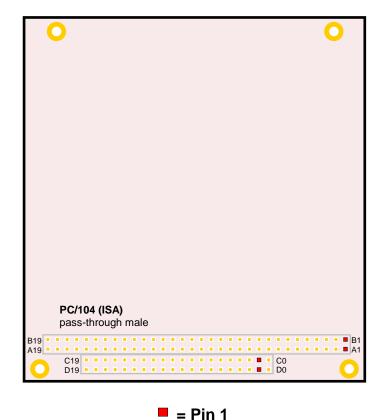


Figure 4. Connector Locations (Bottom)
(Not to scale.)

## **CONNECTOR FUNCTIONS AND INTERFACE CABLES**

Table 1 provides information about the function, mating connectors, and transition cables for VCM-DAS-3 connectors. Page numbers indicate where a detailed pinout is available.

**Table 1: Connector Functions and Interface Cables** 

Connector	Function	Mating Connector	Transition Cable	Cable Description	Page
J1	Digital I/O (A0-A7)	FCI 89361-710LF	_	2mm 10-pin IDC	8
J2	Analog Outputs, Digital I/O (B0- C7)	FCI 89361-740LF	CBR-4004A	12" 2mm 40-pin to 40-pin IDC to screw terminal board CBR- 4004B	9
J3	Analog Outputs, Digital I/O	Standard 0.1" 50-pin cable-mount IDC	Diamond Systems C-50-18	Data acquisition, 50 conductor 0.1" ribbon cable	10
J4	Factory use only	_	_	_	-
J5	PC/104	AMP 1375795-2	_	_	-

# J1 I/O CONNECTOR

The J1 I/O connector incorporates digital I/O signals A0 through A7. The pinout of the connector is shown in Table 2.

Table 2 J1 I/O Connector Pinout

J1 Pin	Signal Name	Function
1	Ground	Ground
2	DIO A7	Digital I/O A7
3	DIO A6	Digital I/O A6
4	DIO A5	Digital I/O A5
5	DIO A4	Digital I/O A4
6	DIO A3	Digital I/O A3
7	DIO A2	Digital I/O A2
8	DIO A1	Digital I/O A1
9	DIO A0	Digital I/O A0
10	Ground	Ground

#### **J2 I/O CONNECTOR**

The J2 I/O connector incorporates analog voltage outputs 0 through 15 and digital I/O channels B0 through C7. Table 3 illustrates the function of each pin and the pinout assignments to connectors on the CBR-4004 I/O board.

Table 3: J2 I/O Connector Pinout

J2			CBR-4004	CBR-4004
Pin	Signal Name	Function	Connector	Pin (Label)
1	VOUT 00	Analog Out Ch 0	J1	5 (IO1)
2	VOUT 01	Analog Out Ch 1	Analog	4 (IO2)
3	VOUT 02	Analog Out Ch 2	Output	3 (IO3)
4	VOUT 03	Analog Out Ch 3		2 (IO4)
5	Ground	Ground		1 (GND1)
6	VOUT 04	Analog Out Ch 4	J2	5 (IO5)
7	VOUT 05	Analog Out Ch 5	Analog	4 (IO6)
8	VOUT 06	Analog Out Ch 6	Output	3 (IO7)
9	VOUT 07	Analog Out Ch 7		2 (IO8)
10	Ground	Ground		1 (GND1)
11	VOUT 08	Analog Out Ch 8	J3	5 (IO9)
12	VOUT 09	Analog Out Ch 9	Analog	4 (IO10)
13	VOUT 10	Analog Out Ch 10	Output	3 (IO11)
14	VOUT 11	Analog Out Ch 11		2 (IO12)
15	Ground	Ground		1 (GND2)
16	VOUT 12	Analog Out Ch 12	J4	5 (IO13)
17	VOUT 13	Analog Out Ch 13	Analog	4 (IO14)
18	VOUT 14	Analog Out Ch 14	Output	3 (IO15)
19	VOUT 15	Analog Out Ch 15		2 (IO16)
20	Ground	Ground		1 (GND2)
21	DIO B7	Digital I/O B7	J6	5 (IO17)
22	DIO B6	Digital I/O B6	Digital I/O B	4 (IO18)
23	DIO B5	Digital I/O B5		3 (IO19)
24	DIO B4	Digital I/O B4		2 (IO20)
25	Ground	Ground		1 (GND3/PBRST#)
26	DIO B3	Digital I/O B3	J7	5 (IO21)
27	DIO B2	Digital I/O B2	Digital I/O B	4 (IO22)
28	DIO B1	Digital I/O B1		3 (IO23)
29	DIO B0	Digital I/O B0		2 (IO24)
30	Ground	Ground		1 (GND3)
31	DIO C7	Digital I/O C7	J8	5 (IO25)
32	DIO C6	Digital I/O C6	Digital I/O C	4 (IO26)
33	DIO C5	Digital I/O C5		3 (IO27)
34	DIO C4	Digital I/O C4		2 (1028)
35	Ground	Ground		1 (GND4)
36	DIO C3	Digital I/O C3	J9	5 (IO29)
37	DIO C2	Digital I/O C2	Digital I/O C	4 (IO30)
38	DIO C1	Digital I/O C1	-	3 (IO31)
39	DIO C0	Digital I/O C0*		2 (IO32)
40	Ground	Ground		1 (GND4)

<sup>\*</sup> Pin 39 can also used as an external trigger for updating DAC channels. See External Trigger Update.

#### J3 I/O CONNECTOR

The J3 I/O connector incorporates analog voltage outputs 0 through 15 and digital I/O channels A0 through C7. The pinout of the connector is shown in Table 4.

Note

This connector is compatible with Diamond Systems' cable C-50-18. Any standard 0.1" 50-pin cable-mount IDC connector will mate with this connector.

Table 4: J3 I/O Connector Pinout

J3 Pin	Signal Name	Function
1	Ground	Ground
2	VOUT 00	Analog Output 0
3	Ground	Ground
4	VOUT 01	Analog Output 1
5	Ground	Ground
6	VOUT 02	Analog Output 2
7	Ground	Ground
8	VOUT 03	Analog Output 3
9	Ground	Ground
10	VOUT 04	Analog Output 4
11	Ground	Ground
12	VOUT 05	Analog Output 5
13	Ground	Ground
14	VOUT 06	Analog Output 6
15	Ground	Ground
16	VOUT 07	Analog Output 7
17	VOUT 08	Analog Output 8
18	VOUT 09	Analog Output 9
19	VOUT 10	Analog Output 10
20	VOUT 11	Analog Output 11
21	VOUT 12	Analog Output 12
22	VOUT 13	Analog Output 13
23	VOUT 14	Analog Output 14
24	VOUT 15	Analog Output 15
25	DIO A7	Digital I/O A7

J3		
Pin	Signal Name	Function
26	DIO A6	Digital I/O A6
27	DIO A5	Digital I/O A5
28	DIO A4	Digital I/O A4
29	DIO A3	Digital I/O A3
30	DIO A2	Digital I/O A2
31	DIO A1	Digital I/O A1
32	DIO A0	Digital I/O A0
33	DIO B7	Digital I/O B7
34	DIO B6	Digital I/O B6
35	DIO B5	Digital I/O B5
36	DIO B4	Digital I/OB4
37	DIO B3	Digital I/O B3
38	DIO B2	Digital I/O B2
39	DIO B1	Digital I/O B1
40	DIO B0	Digital I/O B0
41	DIO C7	Digital I/O C7
42	DIO C6	Digital I/O C6
43	DIO C5	Digital I/O C5
44	DIO C4	Digital I/O C4
45	DIO C3	Digital I/O C3
46	DIO C2	Digital I/O C2
47	DIO C1	Digital I/O C1
48	DIO C0	Digital I/O C0*
49	V5_0	Protected +5.0 Volts
50	Ground	Ground

<sup>\*</sup> Pin 48 can also used as an external trigger for updating DAC channels. See External Trigger Update.

# Installation

#### HARDWARE ASSEMBLY

The VCM-DAS-3 uses pass-through PC/104 (ISA) connectors so that expansion modules can be added to the top or bottom of the stack. PC/104 modules must not be positioned between the CPU board and any PC/104-*Plus* (PCI) modules on the stack.

The entire assembly can sit on a table top or be secured to a base plate. When bolting the unit down, make sure to secure all four standoffs to the mounting surface to prevent circuit board flexing. Standoffs are secured to the top circuit board using four pan head screws. Standoffs and screws are available as part number VL-HDW-101.

An extractor tool is available (part number VL-HDW-201) to separate the PC/104 modules from the stack. Use caution when using the extractor tool not to damage any board components.

#### STACK ARRANGEMENT EXAMPLE

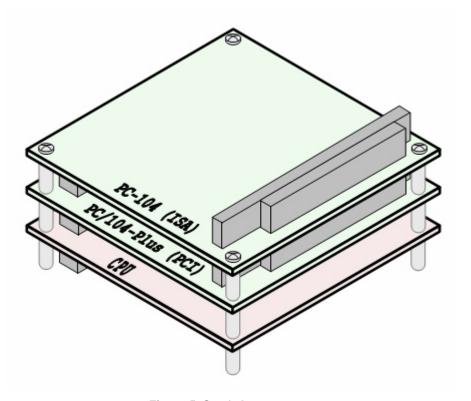


Figure 5. Stack Arrangement

# **Jumper Blocks**

#### **JUMPERS AS-SHIPPED CONFIGURATION**

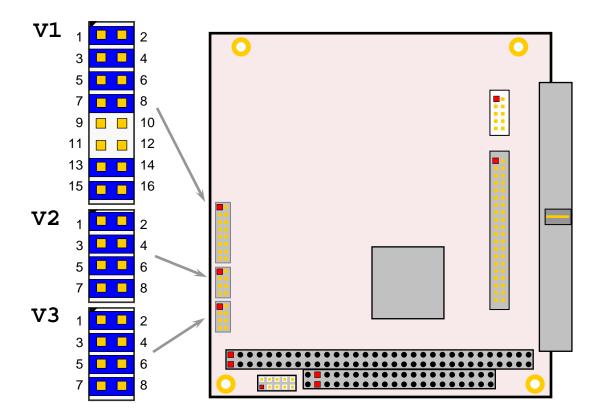


Figure 6. Jumper Block Locations

## **JUMPER SUMMARY**

**Table 5: Jumper Summary** 

Jumper Block	Description					As Shipped	Page
V1[15-16]	Bit Mode Selecto	r				In	15
		-	nsactions sactions				
		ising the			nd with 8-bit transactions. This mode bus. The 16-bit mode allows both 8		
V1[13-14]	Enhanced/Comp	atible M	ode Sele	ctor		In	16
		nced Mo					
					ns, which should operate properly in ems Ruby-MM board.		
V1 [11-12] to	Base Address Se The last digit is all		A base a	address o	of 0x000 to 0x3F0 can be selected.	Out, Out, In, In, In, In,	16
[1-2]	First Digit  0  1  2  3  Second Digit  0  1  2  3  4  5  6  7  8  9  A  B  C  D  E  F		9-10] Out In Out [5-6] In In In Out	[3-4] In In Out Out In Out Out In In Out Out In Out Out Out Out	[1-2] In Out	(0x300)	
V2	A/D Channel 0-7	Span Ra	ange Sele	ector		In, In, In, In	27
	0V to +5V 0V to +10V -5V to +5V -10V to +10V -2.5V to +2.5V -2.5V to +7.5V These jumpers se	[7-8] In	[5-6] In In In Out Out	[3-4] In In Out Out In In up span	[1-2] In Out In Out In Out In Out In out ranges for A/D channels 0-7.	(0V to +5V)	

V	/3	A/D Channel 8-16 Span Range Selector						27
		0V to +5V 0V to +10V -5V to +5V -10V to +10V -2.5V to +2.5V -2.5V to +7.5V	[7-8] In In In In In	[5-6] In In In Out Out	[3-4] In In Out Out In	[1-2] In Out In Out In Out In Out ranges for A/D channels 8-16.	In, In, In, In (0V to +5V)	

# **Base Address Configuration**

As shipped, the VCM-DAS-3 is configured for a base address of 0x300. The card occupies up to 16 consecutive I/O addresses in enhanced mode (only eight I/O addresses in compatible mode). Jumper block V1[11-12] through V1[1-2] is used set the base address.

The base address can be configured from 0x000 to 0x3F0 on any 10h address boundary. Figure 7 shows how to set the address selector jumpers for the appropriate upper and middle hex digits of the three digit base address (for example, the "3" and "1" of base address 0x310).

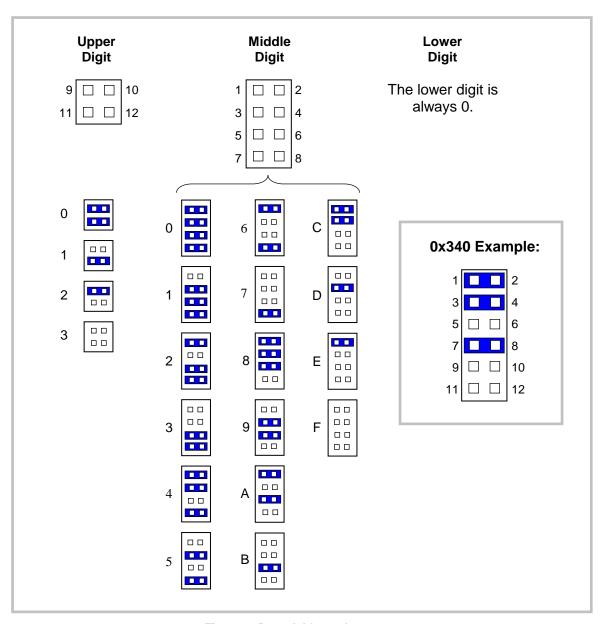


Figure 7. Base Address Jumpers

# **Bit Mode Configuration**

The VCM-DAS-3 can operate using 8-bit or16-bit ISA transactions. For compatibility with 8-bit ISA buses, you must set the VCM-DAS-3 to use 8-bit ISA transactions.

Jumper V1[15-16] selects the bit mode. When a jumper is present, the board will operate on either 16-bit or 8-bit ISA bus. When the jumper is removed, the board is forced to perform only 8-bit ISA transactions. The default setting is jumper installed.

# **Enhanced Mode Configuration**

Jumper V1[13-14] enables you to select between compatible or enhanced modes. A jumper installed on V1[13-14] sets the VCM-DAS-3 to enhanced mode. When no jumper is installed, the board operates in compatible mode. The default mode is enhanced.

In compatible mode, eight registers are decoded for use, including all the registers needed for DAC and DIO operations and control. These registers are identical to those provided by the Diamond Systems Ruby-MM, and enable full compatibility in applications designed with that board. In this mode, analog output ranges are determined by jumper settings (in two banks of eight registers) and are not software programmable.

Enhanced mode provides three additional registers for more specific control of DAC operations. The ENH\_CON register enables you to set spans for specific DAC channels, read DAC data and spans, set DAC channels to sleep mode for power savings, and set and read the gain for all channels.

# **Power-up Span Range Configuration**

Jumper block V2 sets the initial span range for A/D channels 7-0. Jumper block V3 sets the initial span range for A/D channels 15-8. (See Table 5 for a list of settings.) The span range can be set differently for each 8-channel bank. Within each bank, all channels will have the same initial span range; however, in enhanced mode, ranges can be set individually for each channel via software.

Two unipolar output ranges (0V to 5V and 0V to 10V), and four bipolar ranges ( $\pm 2.5V$ ,  $\pm 5V$ ,  $\pm 10V$  and -2.5V to 7.5V) are available.

# I/O Port Mapping

In enhanced mode, the VCM-DAS-3 operates occupies 16 ports in the I/O map. Eleven ports are mapped to functional registers, and the remaining five ports are decoded by the board and cannot be used by other PC/104 modules.

Table 6: Enhanced Mode I/O Port Addresses

Write Register	Read Register	I/O Port Address	As Shipped Address
_	PLDVER	Base Address + F	0x30F
_	-	Base Address + E	0x30E
_	-	Base Address + D	0x30D
_	_	Base Address + C	0x30C
_	_	Base Address + B	0x30B
ENCTRL	ENCTRL	Base Address + A	0x30A
ENDATHI	ENDATHI	Base Address + 9	0x309
ENDATLO	ENDATLO	Base Address + 8	0x308
DIOCTRL	DIOCTRL	Base Address + 7	0x307
DIOC	DIOC	Base Address + 6	0x306
DIOB	DIOB	Base Address + 5	0x305
DIOA	DIOA	Base Address + 4	0x304
EXTRIG	EXTRIG	Base Address + 3	0x303
DACSEL	_	Base Address + 2	0x302
DACHI	DACALL1	Base Address + 1	0x301
DACLO	DACALL0	Base Address + 0	0x300

In compatible mode, the VCM-DAS-3 operates occupies eight ports in the I/O map, all of which are functional.

**Table 7: Compatible Mode I/O Port Addresses** 

Write Register	Read Register	I/O Port Address	As Shipped Address
DIOCTRL	DIOCTRL	Base Address + 7	0x307
DIOC	DIOC	Base Address + 6	0x306
DIOB	DIOB	Base Address + 5	0x305
DIOA	DIOA	Base Address + 4	0x304
EXTRIG	EXTRIG	Base Address + 3	0x303
DACSEL	_	Base Address + 2	0x302
DACHI	DACALL1	Base Address + 1	0x301
DACLO	DACALL0	Base Address + 0	0x300

## I/O PORT REGISTER FUNCTIONS

The following table lists the functions assigned to each read and write I/O port register.

**Table 8: Register Functions** 

Write Register	Description	Page
ENCTRL	Enhanced control	19
ENDATHI	Enhanced Data MSB	20
ENDATLO	Enhanced Data LSB	20
DIOCTRL	Digital I/O control register	21
DIOC	Digital I/O port C data	23
DIOB	Digital I/O port B data	23
DIOA	Digital I/O port A data	23
EXTRIG	External trigger enable	24
DACSEL	DAC channel register	25
DACHI	Analog output most significant data byte (MSB).	26
DACLO	Analog output least significant data byte (LSB).	26

Read Register	Description	Page
ENCTRL	Enhanced control	19
ENDATHI	Enhanced Data MSB	20
ENDATLO	Enhanced Data LSB	20
DIOCTRL	Digital I/O control register	21
DIOC	Digital I/O port C data	22
DIOB	Digital I/O port B data	22
DIOA	Digital I/O port A data	22
EXTRIG	External trigger enable	24
DACALL1	Update all DACs simultaneously	26
DACALL0	Update all DACs simultaneously	26

# **Enhanced Mode Registers**

Setting the VCM-DAS-3 to enhanced mode enables three additional functional registers. To enable enhanced mode, install a jumper on pins V1[13-14].

## **ENHANCED CONTROL REGISTER**

## ENCTRL (Write) 030Ah

7	6	5	4	3	2	1	0
CTRL3	CTRL2	CTRL1	CTRL0	SEL3	SEL2	SEL1	SEL0

**Table 9: Register Bit Assignments** 

Bit	Mnemonic	Descrip	tion			
7-4	CTRL	Enhance specific D			– These	bits select operations to be performed on
		CTRL3	CTRL2	CTRL1	CTRL0	Function
		0	0	0	0	Set Span: 0V to +5V
		0	0	0	1	Set Span: 0V to +10V
		0	0	1	0	Set Span: -5V to +5V
		0	0	1	1	Set Span: -10V to +10V
		0	1	0	0	Set Span: -2.5V to +2.5V
		0	1	0	1	Set Span: -2.5V to +7.5V
		0	1	1	0	(Reserved. Do not use.)
		0	1	1	1	(Reserved. Do not use.)
		1	0	0	0	Read DAC
		1	0	0	1	Read Span
		1	0	1	0	Load DAC (LDAC)
		1	0	1	1	DAC Sleep
		1	1	0	0	(Reserved. Do not use.)
		1	1	0	1	(Reserved. Do not use.)
		1	1	1	0	Set Gain
		1	1	1	1	Read Gain
3-0	SEL	Channel	Selection		ese bits s	select the DAC channel for the operation.
		SEL3	SEL2	SEL1	SEL0	Channel
		0	0	0	0	0
		0	0	0	1	1
		0	0	1	0	2
		0	0	1	1	3
		0	1	0	0	4
		0	1	0	1	5
		0	1	1	0	6
		0	1	1	1	7
		1	0	0	0	8
		1	0	0	1	9
		1	0	1	0	10
		1	0	1	1	11
		1	1	0	0	12
		1	1	0	1	13
		1	1	1	0	14
		1	1	1	1	15

## ENCTRL (Read) 030Ah

7	6	5	4	3	2	1	0
_	_	_	-	_	_	1	READY

#### **Table 10: Register Bit Assignments**

Bit	Mnemonic	Description
7-1	_	Enhanced DAC Control
0	Ready	Ready – Factory use only.
		0 = SPI transaction in progress 1 = SPI transaction complete
		The internal logic of the SPI state machine is much faster than the ISA bus speed, which limits the usefulness of his bit for anything other than factory debugging of the design.

#### **ENHANCED MODE DATA REGISTERS**

## ENDATHI MSB (Read) 0309h

7	6	5	4	3	2	1	0
D15	D14	D13	D12	D11	D10	D9	D8

## ENDATLO LSB (Read/Write) 0308h

7	6	5	4	3	2	1	0
D7	D6	D5	D4	D3	D2	D1	D0

The data format of these registers depends on the operation executed in the ENCTRL register. See the sections listed below for information on data formats for specific operations.

Operation	CTRL Code (ENCTRL)	Page
Read DAC	08h	35
Read Span	09h	35
Set Gain	0Eh	34
Read Gain	0Fh	34

# **Digital I/O Control Register**

# DIOCTRL (Read/Write) 0307h

7	6	5	4	3	2	1	0
_	-	_	DIRA	DIRCHI	_	DIRB	DIRCLO

**Table 11: DIOCTRL Bit Assignments** 

Bit	Mnemonic	Description
7-5	-	Unused. These bits have no function.
4	DIRA	<b>DIO Port A Direction</b> – These bits control the direction of DIO port A (A7-A0).
		0 = Output 1 = Input
3	DIRCHI	<b>DIO Port C MSB Direction</b> – These bits control the direction of the upper half of DIO port C (C7-C4).
		0 = Output 1 = Input
2	_	Unused. This bit has no function.
1	DIRB	<b>DIO Port B Direction</b> – These bits control the direction of DIO port B (B7-B0).
		0 = Output 1 = Input
0	DIRCLO	<b>DIO Port C LSB Direction</b> – These bits control the direction of the lower half of DIO port C (C3-C0).
		0 = Output 1 = Input

# **Digital I/O Data Registers**

## **DIGITAL INPUT REGISTERS**

## DIOA (Read) 0304h

D7	D6	D5	D4	D3	D2	D1	D0
DIO A7	DIO A6	DIO A5	DIO A4	DIO A3	DIO A2	DIO A1	DIO A0

# DIOB (Read) 0305h

D7	D6	D5	D4	D3	D2	D1	D0
DIO B7	DIO B6	DIO B5	DIO B4	DIO B3	DIO B2	DIO B1	DIO B0

# DIOC (Read) 0306h

D7	D6	D5	D4	D3	D2	D1	D0
DIO C7	DIO C6	DIO C5	DIO C4	DIO C3	DIO C2	DIO C1	DIO C0

**Table 12: Digital Input Data Bit Assignments** 

Bit	Mnemonic	Description
7-0	DIO A7-A0 DIO B7-B0 DIO C7-C0	<b>Digital Input Data</b> – Data read from these registers returns the current input state of the digital port signals on connectors J1 and J2. Data is not inverted. When a signal line is high, the bit reads as 1; when a signal line is low, the bit reads as 0.
		To operate a port in input mode, you must first set the direction of the port to input by setting the appropriate bit in the DIOCTRL register. If a port is operated in output mode, the registers can be used to read back the logic state of the output lines. Normally, the data read would be the same as the data written to the output registers; however, if an output line is stuck high or shorted to ground, the fault will be reflected in the feedback data.

# **DIGITAL OUTPUT REGISTERS**

# DIOC (Write) 0306h

D7	D6	D5	D4	D3	D2	D1	D0
DIO C7	DIO C6	DIO C5	DIO C4	DIO C3	DIO C2	DIO C1	DIO C0

# DIOB (Write) 0305h

D7	D6	D5	D4	D3	D2	D1	D0
DIO B7	DIO B6	DIO B5	DIO B4	DIO B3	DIO B2	DIO B1	DIO B0

# DIOA (Write) 0304h

D7	D6	D5	D4	D3	D2	D1	D0
DIO A7	DIO A6	DIO A5	DIO A4	DIO A3	DIO A2	DIO A1	DIO A0

# **Table 13: Digital Output Data Bit Assignments**

Bit	Mnemonic	Description
D7-D0	DIO A7-A0 DIO B7-B0 DIO C7-C0	<b>Digital Output Data</b> – Data written to these registers is driven onto the digital port signals on connectors J1 and J2. Data is not inverted. When a bit is set to 1, the signal line is driven high; when a bit is reset to 0, the signal line is driven low.
		To operate a port in output mode, you must first set the direction of the port to output by clearing the appropriate bit in the DIOCTRL register.

# **External Trigger Enable Register**

# EXTRIG (Read/Write) 0303h

7	6	5	4	3	2	1	0
_	_	_	-	_	_	_	TRIGEN

**Table 14: EXTRIG Bit Assignments** 

Bit	Mnemonic	Description
7-1	_	Unused. These bits have no function.
0	TRIGEN	Trigger Enable – When the external trigger is enabled, digital I/O line C0 will update all DACs simultaneously when it is brought low. This can be done either by an external signal, when C0 is in input mode, or in software, when C0 is in output mode. If using an external trigger, make sure that the lower half of Port C is in input mode.  1 = Enable 0 = Disable

# **Analog Output Data Registers**

# **DAC CHANNEL SELECT REGISTER**

# DACSEL (Write) 0302h

7	6	5	4	3	2	1	0
_	-	_	_	SEL3	SEL2	SEL1	SEL0

**Table 15: DACSEL Bit Assignments** 

Bit	Mnemonic	Descrip	tion					
7-4	_	Unused.	These b	its have	no funct	tion.		
3-0	SEL	Channel output fui	<b>Channel Selection</b> – These bits select the DAC channel upon which digital output functions will be performed.					
		SEL3	SEL2	SEL1	SEL0	Selected Channel		
		0	0	0	0	0		
		0	0	0	1	1		
		0	0	1	0	2		
		0	0	1	1	3		
		0	1	0	0	4		
		0	1	0	1	5		
		0	1	1	0	6		
		0	1	1	1	7		
		1	0	0	0	8		
		1	0	0	1	9		
		1	0	1	0	10		
		1	0	1	1	11		
		1	1	0	0	12		
		1	1	0	1	13		
		1	1	1	0	14		
		1	1	1	1	15		

#### **DAC WRITE REGISTERS**

## DACHI (Write) 0301h

7	6	5	4	3	2	1	0
_	ı	_			DA10	DA9	DA8
DA	CLO (Write)	0300h					
7	6	5	4	3	2	1	0
DA7	DA6	DA5	DA4	DA3	DA4	DA1	DA0

#### **Table 16: DACHI Bit Assignments**

Bit	Mnemonic	Description
7-4	_	Unused. These bits have no function.
3-0	DACHI	<b>Analog Output Data MSB</b> – Digital-to-analog data bits DA11-DA8. DA11 is the most significant bit. This register is used with the DACLO register to form the 12-bit analog output value.

## **Table 17: DACLO Bit Assignments**

Bit	Mnemonic	Description
7-0	DACLO	Analog Output DATA LSB – Digital-to-analog data bits DA7-DA0. DA0 is the least significant bit. This register is used with the DACHI register to form the 12-bit analog output value.

#### **DAC READ REGISTERS**

## DACALL1 (Read) 0301h

7	6	5	4	3	2	1	0
_	_	_	_	DA11	DA10	DA9	DA8

## DACALLO (Read) 0300h

7	6	5	4	3	2	1	0
DA7	DA6	DA5	DA4	DA3	DA4	DA1	DA0

Reading from these locations updates all DACs to the values written to them. Only DACs with new data written to them will change. The remaining channels will retain their current values.

# **Analog Output**

# **Analog Output Ranges and Resolution**

VCM-DAS-3 provides six different analog output ranges (shown in Table 18), including four bipolar ranges and two unipolar ranges. One of the bipolar ranges (-2.5 to +7.5V) is asymmetrical. Power-up ranges are determined by jumper settings (see Power-up Span Range Configuration). Ranges for individual channels can be set by software using the Set Span command, available in enhanced mode.

The resolution for any output range is equal to the maximum possible range of output voltages divided by the maximum number of possible steps. For a 12-bit D/A converter, the maximum number of steps is 4096. The actual output codes range from 0 to 4095, which is the full range of possible 12-bit binary numbers. (See Analog Output Data Representation.)

The table below shows the analog output ranges and resolutions available on the VCM-DAS-3. Negative full scale refers to the output voltage for a code of 0, and positive full scale refers to the output voltage for a code of 4095.

Full-Scale Voltage	Bipolar or Unipolar	Range Name	Negative Full Scale	Positive Full Scale	Resolution (1 LSB)
10V	Bipolar	±10V	-10V	+9.9951V	4.88mV
5V	Bipolar	±5V	-5V	+4.9963V	2.44mV
2.5V	Bipolar	±2.5V	-2.5V	+2.4988V	1.22mV
7.5V	Bipolar	-2.5 to +7.5V	-2.5V	+7.4963V	2.44mV
10V	Unipolar	0-10V	0V	+9.9976V	2.44mV
5V	Unipolar	0-5V	0V	+4.9988V	1.22mV

**Table 18: Analog Output Ranges and Resolution** 

#### SETTING A SPAN RANGE

Power-up span ranges are determined for blocks of channels by jumper settings (see Power-up Span Range Configuration); however, in enhanced mode, you can set the span range for any individual channel. To perform a Set Span operation:

- 1. Write the appropriate Set Span code (see Enhanced Control Register) to the CTRL field of the ENCTRL register at I/O port 0x30A, combined with the channel number in the SEL bits of the same register.
- 2. Perform an LDAC operation by writing Ah to the CTRL field of the ENCTRL register, combined with the channel number in the SEL field of the same register.

# **Analog Output Data Representation**

Two different digital coding schemes are used for analog output operations.

- For unipolar output ranges (positive voltages only), straight binary coding is used.
- For bipolar output ranges (both positive and negative voltages), offset binary coding is used.

#### **STRAIGHT BINARY CODING**

The formulas for calculating analog or straight binary digital values are given by:

$$Digital = \frac{Analog}{Step}$$
 Analog = Step x Digital

Where:

Analog = Applied voltage

Digital = A/D conversion data

Step = 0.00244140625 for 0-10V range

0.00122070313 for 0-5V range 0.0006103515625 for 0-2.5V range

**Table 19: Straight Binary Data Format** 

0-2.5V Range	0-5V Range	0-10V Range	Hex	Decimal	Comment
+2.5000	+5.0000	+10.0000	_	_	Out of range
+2.4993	+4.9987	+9.9975	FFFh	4095	Maximum positive voltage
+1.2500	+2.5000	+5.0000	800h	2048	Positive half scale
+0.6250	+1.2500	+2.5000	400h	1024	Positive quarter scale
+0.00061	+0.00122	+0.00244	001h	1	Positive 1 LSB
0.0000	0.0000	0.0000	000h	0	Zero (ground output)

#### **OFFSET BINARY CODING**

The formulas for calculating analog or straight binary digital values are given by:

$$Digital = \left[ \frac{Analog}{Step} \right] + Offset_1 \qquad Analog = (Step x Digital) - Offset_2$$

Where:

Analog = Applied voltage

Digital = A/D conversion data

 $Offset_1 \ = \ 2048 \ for \ symmetrical \ ranges$ 

1024 for asymmetrical range

Step = 0.00122070313 for  $\pm 2.5$ V range

0.00244140625 for  $\pm 5V$  and -2.5 to +7.5 ranges

 $0.0048828125 \text{ for } \pm 10 \text{V range}$ 

Offset<sub>2</sub> = 2.5 for  $\pm 2.5$ V and -2.5 to +7.5 ranges

5 for  $\pm 5V$ 

10 for  $\pm 10V$  range

Table 20: Offset Binary Data Format – Symmetrical Ranges

±2.5V Output Voltage	±5V Output Voltage	±10V Output Voltage	Hex	Decimal	Comment
+2.5000	+5.0000	+10.0000	_	-	Out of range
+2.4987	+4.9975	+9.9951	FFFh	4095	Maximum positive voltage
+1.2500	+2.5000	+5.0000	C00h	3072	Positive half scale
+0.6250	+1.2500	+2.5000	A00h	2560	Positive quarter scale
+0.00122	+0.00244	+0.00488	801h	2049	Positive 1 LSB
0.0000	0.0000	0.0000	800h	2048	Zero (ground voltage)
-0.00122	-0.00244	-0.00488	7FFh	2047	Negative 1 LSB
-0.6250	-1.2500	-2.5000	600h	1536	Negative quarter scale
-1.2500	-2.5000	-5.0000	400h	1024	Negative half scale
-2.5000	-5.0000	-10.0000	000h	0	Maximum negative voltage

Table 21: Offset Binary Data Format – Asymmetrical Range

-2.5 to +7.5 Output			
Voltage	Hex	Decimal	Comment
+7.5000	ı	ı	Out of range
+7.4975	FFFh	4095	Maximum positive voltage
+3.7500	A00h	2560	Positive half scale
+1.8750	700h	1792	Positive quarter scale
+0.00244	401h	1025	Positive 1 LSB
0.0000	400h	1024	Zero (ground voltage)
-0.00244	3FFh	1023	Negative 1 LSB
-0.6250	300h	768	Negative quarter scale
-1.2500	200h	512	Negative half scale
-2.5000	000h	0	Maximum negative voltage

# **Analog Output Programming**

Analog output voltages can be programmed either directly or with the use of a driver. This section describes how to modify analog output voltages directly.

VCM-DAS-3 analog outputs have a resolution of 12 bits. Data is written to the board in 8-bit bytes, so two bytes must be used to write a single analog output value. These bytes are referred to as the least significant byte (LSB) and the most significant byte (MSB).

When modifying analog outputs, one or multiple channels can be updated simultaneously. For this reason, the update operation is separate from the data write operation.

To change an analog output on one or more channels:

- 1. Write the channel number to the DACSEL register at I/O port 0x302.
- 2. Write the LSB to the DACLO register at I/O port 0x300.
- 3. Write the MSB to the DACHI register at I/O port 0x301.
- 4. Repeat steps 1-3 for each channel to be changed.
- 5. Finally, update all channels simultaneously by reading the DACLO register.

#### **EXTERNAL TRIGGER UPDATE**

An external trigger is enabled by setting the TRIGEN bit in the EXTRIG register at I/O port 0x303. When the external trigger is enabled, digital I/O line C0 will update all DACs simultaneously when it is brought low. This can be done either by an external signal, when C0 is in input mode, or in software, when C0 is in output mode. If using an external trigger, make sure that the lower half of Port C is in input mode.

When the trigger signal is low, DACs are updated as soon as new data is written to them. When the trigger signal is high, the DAC voltage outputs remain fixed, unless updated in software.

#### LOAD DAC OPERATION

The Load DAC (LDAC) operation provides a method for updating a single DAC channel. To perform the LDAC operation, write Ah to the CTRL field of the ENCTRL register at I/O port 0x30A, combined with the channel number in the SEL field of the same register.

To change an analog output a single channel using the LDAC operation:

- 1. Write the channel number to the DACSEL register at I/O port 0x302.
- 2. Write the LSB to the DACLO register at I/O port 0x300.
- 3. Write the MSB to the DACHI register at I/O port 0x301.
- 4. Perform the LDAC operation for the selected channel.

# **Analog Output Code Example**

The following Visual BASIC code illustrates how to operate the analog output feature of the VCM-DAS-3.

```
FUNCTION LIB_das3aout (BYVAL channel, BYVAL range, BYVAL voltage)
               This function performs an
'Description:
               analog output operation to the
               specified channel.
'Entry:
               channel: analog output channel (0 to 15)
                       0=5V, 1=10V, 2=+/-5V, 3=+/-10V
               range:
                       4=2.5V, 5=-2.5V/+7.5V
               voltage: analog output voltage (within range)
               0 if no errors
'Returns:
               1 if timeout occurs
              'Output +5.000V on channel 0
'Examples:
               x = LIB_das3aout (0,1,5.000)
               'Output -7.500V on channel 1
               x = LIB_{das3aou} (1, 3, -7.500)
'Enhanced Control Register (BASE + 0xA)
                 D7
                     D6 D5 D5
                                   D3
                                         D2
                                             D1
                 EC3 EC2 EC1 EC0 ---DAC CHANNEL---
                 _____
   0V to +5V
                           0
                               0
   0V to +10V
                 0
                     0
                                1
  -5V to +5V
                 0
                     0
                          1
' -10V to +10V
                               1
                 0
                     0
                          1
'-2.5V to +2.5V
                 0
                     1
'-2.5V to +7.5V
                                1
DIM value AS INTEGER
DIM hidac AS INTEGER
DIM lodac AS INTEGER
DIM done AS INTEGER
DIM y AS INTEGER
DIM x AS INTEGER
DIM bipolar AS INTEGER
DIM fullscale AS SINGLE
SELECT CASE range
      CASE 0
               '+5V
           bipolar = 0
           fullscale = 5
               '+10V
      CASE 1
           bipolar = 0
           fullscale = 10
      CASE 2
               '+/-5V
           bipolar = 1
           fullscale = 5
      CASE 3 '+/-10V
```

```
bipolar = 1
             fullscale = 10
       CASE 4 '+/-2.5V
             bipolar = 1
             fullscale = 2.5
       CASE 5 '+7.5/-2.5V
             bipolar = 2
             fullscale = 7.5
END SELECT
IF bipolar = 1 THEN
   'offset binary coding (symetrical ratio)
value = INT((voltage / fullscale) * 2048 + 2048)
ELSEIF bipolar = 2 THEN 'offset binary coding (asymetrical ratio)
value = INT((voltage / fullscale) * 3072 + 1024)
ELSE 'Unipolar
   'straight binary coding
   value = INT((voltage / fullscale) * 4096)
END IF
'Limit excursion
IF value > 4095 THEN
  value = 4095
END IF
'Separate low byte from high nibble
lodac = value AND &HFF
hidac = (value AND &HF00) / 256
'Set selected DAC channel to the desired range
'(ENHANCED MODE REGISTER)
OUT BASE + &HA, ((range * 16) + channel)
'Set selected DAC channel to desired voltage
OUT BASE, lodac
OUT BASE + 2, channel
OUT BASE + 1, hidac
'A single read updates all outputs
x = INP(BASE)
'Wait for DONE or timeout before returning
done = 0
y = 0
WHILE NOT done
      y = y + 1
      IF y < 2000 THEN
                           'timeout
          done = INP(BASE + &HA) AND &H01 '(ENHANCED MODE REGISTER)
          LIB das3aout = 1
          EXIT FUNCTION
      END IF
WEND
LIB_das3aout = 0
END FUNCTION
```

## **Calibration**

Calibration, if desired, is accomplished by mathematical transformation in software. Gain for the board (not individual channels) can be adjusted using the ENCTRL register. Offset adjustments are not currently implemented on the board.

An SPI transaction to the gain pot will take less than 10 us. However, the Gain pot takes up to 20 ms to update its EEPROM when written to. During calibration, you need to wait 2 ms after the write command before measuring the voltage of the DAC output.

#### **SETTING THE GAIN**

The range of gain adjustment is 24 mV. The gain is encoded using the eight bits of the ENDATLO register, so each step equals 0.094 mV. To perform the Set Gain command, write E0h to the ENCTRL register at I/O port 0x30A, and then write the gain value to the ENDATLO register at I/O port 0x308. The following procedure is recommended for setting the gain:

- 1. Select channel 0 by writing 0h to the DACSEL register at I/O port 0x302.
- 2. Output the code for 0V by writing 0h to both the DACHI and DACLO registers.
- 3. Using high-precision volt meter (VOM), read the voltage on channel 0. The voltage read is the offset.
- 4. Output the code for known voltage minus the offset to channel 0.
- 5. Using the VOM, read voltage on channel 0. The difference between the VOM reading and the known voltage applied in step 4 is the gain error.
- 6. Adjust gain pot up or down to reduce the gain error to the lowest possible amount.

Note that there is no adjustment for offset error. You must accommodate for offset with software. The gain value you set is non-volatile.

## **READING THE GAIN**

To perform the Read Gain operation, write F0h to the ENCTRL register at I/O port 0x30A, and then read the value of the ENDATLO register at I/O port 0x308.

# **Enhanced Mode Operations**

The VCM-DAS-3 must be in enhanced mode to perform enhanced mode operations.

#### **READING DAC DATA**

Reading a DAC using the Read DAC operation does not cause the DAC to be updated, as reading the DACALL0 register does. Performing a Read DAC operation loads the DAC voltage code in the ENDATHI and ENDATLO registers. To read the voltage of a DAC:

- 1. Perform a Read DAC operation by writing 8h to the CTRL field of the ENCTRL register at I/O port 0x30A, combined with the channel number in the SEL field of the same register.
- 2. Read the ENDATHI register and then the ENDATLO register. The 12 bits of the output voltage code are offset toward the MSB, as shown below.

#### ENDATHI MSB (Read) 0309h

7	6	5	4	3	2	1	0
D11	D10	D9	D8	D7	D6	D5	D4

#### ENDATLO LSB (Read) 0308h

7	6	5	4	3	2	1	0
D3	D2	D1	D0	0	0	0	0

#### READING THE SPAN OF A CHANNEL

To read the span of a channel:

- 1. Perform a Read Span operation by writing 9h to the CTRL field of the ENCTRL register at I/O port 0x30A, combined with the channel number in the SEL field of the same register.
- 2. Read the span code from bits 3-0 of the ENDATLO register at I/O port 0x308, as shown below.

#### ENDATLO LSB (Read) 0308h

7	6	5	4	3	2	1	0
ı	-	-	-	D3	D2	D1	D0

#### **SETTING A CHANNEL TO SLEEP MODE**

To set a DAC to sleep mode, perform a Sleep DAC operation by writing Bh to the CTRL field of the ENCTRL register at I/O port 0x30A, combined with the channel number in the SEL field of the same register. The channel remains in sleep mode until a voltage output code is written to it.

#### READING THE SLEEP STATUS OF A CHANNEL

To read the sleep status of a channel:

- 1. Perform a Read Span operation by writing 9h to the CTRL field of the ENCTRL register at I/O port 0x30A, combined with the channel number in the SEL field of the same register.
- 2. Read the SLEEPSTAT bit (bit 4) of the ENDATLO register at I/O port 0x308, as shown below. A value of 0 = awake. A value of 1 = sleep mode.

#### ENDATLO LSB (Read) 0308h

7	6	5	4	3	2	1	0
_	_	_	SLEEPSTAT	-	-	_	_

# **Signal Direction**

The 24 digital I/O port signals on the VCM-DAS-3 can be configured as inputs or outputs, in groups of eight or, in the case of port DIOC, in groups of four. Signal direction is set by manipulating the bits in the DIOCTRL register. The logic level on any digital I/O channel can be set by writing a 1 or 0 to the appropriate bit. The digital I/O interface of the VCM-DAS-3 are 82C55 Mode 0 compatible only.

# **Signal Polarity**

All digital I/O circuits on the VCM-DAS-3 are non-inverted, true logic. A high logic level is represented by a 1 in the digital I/O data registers, and a low logic level is represented by a 0.

Since Opto 22 modules invert the logic sense of signals passed through them, the register-to-module interface is negative logic. The resulting data interface levels between the VCM-DAS-3 and I/O rack modules are shown below.

Data Written	I/O Pin	Output Modules	Input Modules	I/O Pin	Data Read
0	(Low)	Power On	Voltage Present	(Low)	0
1	(High)	Power Off	Voltage Absent	(High)	1

# **Digital Input**

The logic state of the digital input channels can be read at any time by reading the DIOA, DIOB, or DIOC registers. Simply choose the correct register and read it as an 8-bit quantity.

# **Digital Output**

The logic state of any digital output channel can be manipulated at any time by writing to the DIOA, DIOB, or DIOC registers. Simply choose the correct register and write the digital value as an 8-bit quantity.

# References A

DAC Controller <u>LTC2704 Datasheet</u>

Linear Technology LTC2704

PC/104 Specification PC/104 Consortium

PC/104 Resource Guide

PC/104-Plus Specification VersaLogic Corporation

PC/104 Resource Guide

General PC Documentation <u>Microsoft Press</u>

The Programmer's PC Sourcebook

General PC Documentation Powell's Books

The Undocumented PC